Front

Link2Home

Instruction manual
**Clamp Desk Socket
3 Outlets with USB**

Max. 1.968 in
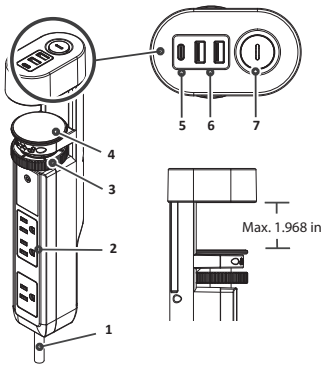
Model: EM-PU-475W

Product overview
1. Main cable 125 V (max. 1875 W)
2. 3 x Grounded Outlets
3. Adjustable knob for table clamp
4. Table clamp
5. 1x Charging connection USB-C
6. 2x Charging connection USB-A
7. On/off switch (push-button) with indicator light
8. Type 3 SPD: VPR 500V (L-N)
   1020 Joules surge protection

Intended use
The desk clamp socket is used to connect up three 125 V devices and to charge devices via USB charging ports. Any other use is considered improper. Authorized modifications or conversions that are not described in these operating instructions are not permitted and will result in damage to this product. In order to use the desk clamp socket as intended, it must be installed correctly and the instructions in the operating manual must be observed and followed.

Important safety instructions

WARNING! Choking hazard due to small parts, packaging and protective film! Keep children away from the product and its packaging!

WARNING! There is a risk of electric shock! Never open or repair the product yourself. Never touch bare contacts with metal objects. Never handle the product with wet hands. Do not use the product if it is damaged.

Note on use

Before connecting and using the product, please read these operating instructions and keep them for future reference.

Protect the product from direct sunlight, naked flames, heat sources and moisture.
Do not store the product at extreme temperatures or in a humid environment, as this may affect its service life.
Prevent the collection of dust and moisture.
Do not cover the product during operation.
The product is not intended for commercial use and should only be used indoors in accordance with the instructions.
Only operate the product from a professionally installed socket.
Observe the information under Technical data.

Scope of delivery
1x Socket strip
1x Operating instructions

Installation location
Place the socket strip with the recess on a tabletop with a maximum thickness of 1.968 in.

Assembly
1. Turn the adjustable knob nut(3) anti-clockwise to open the table clamp(4).
2. Turn the adjustable knob nut (3) clockwise to secure the socket strip to the tabletop.
3. Make sure that the table clamp is not too loose. Excessive tightening can lead to deformation.
4. Connect the main plug (1) to a properly installed socket and plug in your appliances.

If several appliances are plugged in at the same time, the maximum total power of 1875 W must not be exceeded.

Operation
Use the push button (7) to switch the grounded outlets (2) found on the strip on and off.

The indicator light on the push-button (7) lights up when the sockets are switched on.
The USB ports (5/6) also function when the sockets are switched off.

Back

Dismantling
1. Disconnect the main plug (1) from the socket.
2. Turn the adjustable knob nut (3) anti-clockwise to release the socket strip from the tabletop.

Cleaning
Clean the surface with a soft, dry, lint-free cloth. Do not use any solvents or cleaning agents.

Technical changes
These operating instructions are for informational purposes only.
Its contents are not subject to contract. All data given are nominal values only. The equipment and options described may vary depending on country-specific requirements.

LINK2HOME
1 YEAR LIMITED WARRANTY

link2home.com

⚠ **WARNING**: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.